 
 
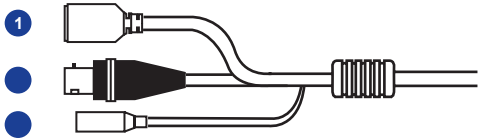 
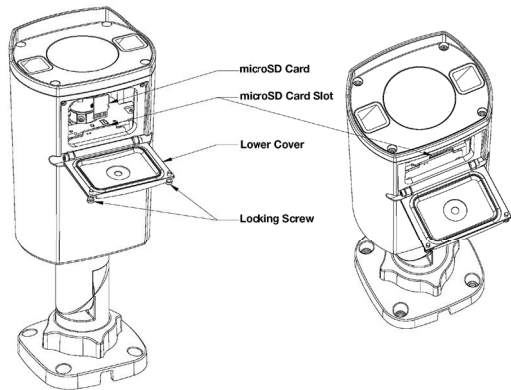 


CONNECTIONS

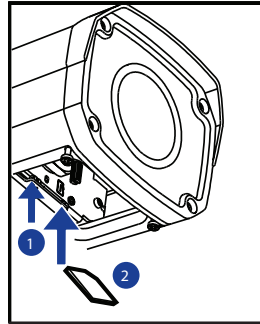


1	RJ-45	For network and PoE connections
2	BNC	For analog video input
3	Power (12vDC)	Power connection
4*	Audio In/Out	Audio Out is reserved
5*	Alarm I/O	Blue Ground
		Brown Alarm Input
		Green Alarm Out -
		Orange Alarm Out +

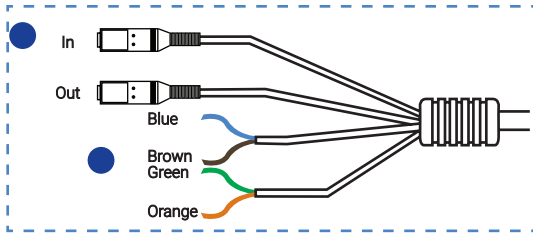

1	Reset Jumper	To restore the camera to factory defaults: 1. Disconnect power for 30 seconds. 2. Reconnect power and wait 30 seconds. 3. Close the jumper connection with a proper tool for 20 seconds.
2	MicroSD Card Slot	Supports up to 128GB microSD card for Edge storage. Do not add or remove the microSD card when the camera is powered on.

 Waterproof Cable

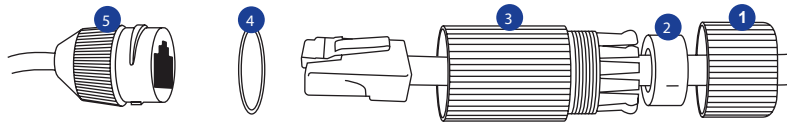

1	Thread lock cap	4	Rubber "O" ring
2	Rubber plug	5	Camera cable
3	RJ45 enclosure		

OpenEye[®]

The Cloud Video Platform

Liberty Lake, WA, USA
509.232.5261

openeye.net

Copyright ©2021 OpenEye.
All Rights Reserved. Information contained in this document is subject to change without prior notice. OpenEye does its best to provide accurate information but cannot be held responsible for typos or mistakes.

OpenEye[®]

QUICK START GUIDE

 
OE-C7094-AWR / 4MP IP Bullet Camera
OE-C7098-AWR / 8MP IP Bullet Camera

This quick start guide provides only basic information on the camera's settings and operation for initial installation. Please read the user manual for optimal camera configurations.

35562AH


openeye.net

CONTENTS




OE-C7094/8-AWR
Bullet Camera

 
Waterproof
Cable



Self-Tapping
Screws &
Plastic Anchors

 

Mounting Template

 

Quick Start
Guide

INSTALLATION

1. Apply template sticker to desired camera location.
2. Drill anchor holes using included mounting template.
3. Remove mounting template.
4. Insert anchors.
5. Mount camera.
6. Connect network cable with included waterproof cable connector.
7. Adjust camera view.

 
NOTE: If the camera will be exposed to inclement weather, OpenEye recommends sealing around the camera base, or connection to accessory and accessory connection to mounting surface with outdoor waterproof caulking.

POWER

This camera is compatible with 12vDC and Power over Ethernet (PoE). If you are connecting 12vDC power, verify the polarity of the power connection.

ETHERNET CABLE CONNECTIONS

Connect a network cable to the camera using the RJ45 input and connect the other end of the cable to your network switch or recorder.



DEFAULT USERNAME AND PASSWORD

NOTE: OpenEye IP cameras ship without a default password.

The admin user password can be set using the following methods:

1. OpenEye recorders running Apex 2.1 or newer will automatically set a new unique password if:
 - Connected to an M-Series recorder with a built in PoE switch.
 - Connected to a network switch through the camera network port and selected then added in setup, if a new password has not already been set.
2. Connect to the camera directly through a Web Browser and follow the onscreen prompts.
3. Use the Network Camera Manager (NCM) Utility.

Username: **admin**

NOTE: The NCM software manual can be found at <https://www.openeye.net/ncm-manual>



NOTE: Refer to your Apex recorder manual or quick start guide for instruction on adding cameras. Passwords must be 9-32 characters including at least two elements of the following three: digits, letters, and special characters.

ASSIGNING AN IP ADDRESS

OpenEye IP cameras are set to DHCP by default. If a DHCP server is not detected after 4 minutes, the camera will default to IP address 192.168.51.2. If you are not using a DHCP server, NCM will allow you to batch configure a static IP address. The IP address for the camera network on your Apex recorder is 192.168.51.1.



NOTE: To change this IP address please refer to your Apex recorder manual.

 
Selecting multiple cameras and entering IP address 192.168.51.2 will set an IP address on all selected cameras, starting at 192.168.51.2 and increase per camera.

1. Open Network Camera Manager.
2. Select applicable camera(s).
3. Input starting IP address, Subnet Mask, Gateway, DNS.



NOTE: NCM requires entry in all fields

4. Apply changes.
5. Wait 60 seconds before refreshing NCM.

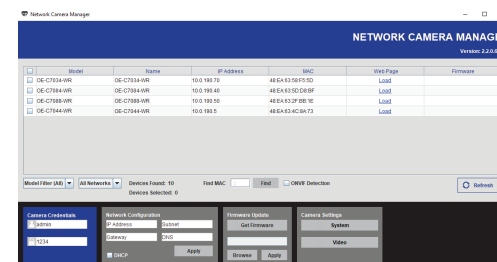

CONNECTING TO THE IP CAMERA

To access the camera setup menu, you need to open Network Camera Manager (NCM) utility. NCM is pre-installed on all OpenEye Recorders, and is also available for download on the OpenEye website for installation on your personal computer or laptop.

1. Open Network Camera Manager.
2. Locate your camera on the Network Camera Manager list.
3. To open the web browser, select the camera and click LOAD.

PRODUCT FEATURES

Camera		
Model	OE-C7094-AWR	OE-C7098-AWR
Maximum Resolution	2592x1520	3840x2160
Frame Rate at Maximum Resolution	20FPS	15FPS
ONVIF	ONVIF Profile S / G Compliant	
Day/Night	True Day / Night	
Wide Dynamic Range	True WDR	

Environmental and Power		
Model	OE-C7094-AWR	OE-C7098-AWR
Power Consumption	9W Max	
Input Voltage	12VDC ±25% / PoE	
Operating Temperature	-31°~140°F (-35°~60°C)	
IP Rating	IP67	
Vandal Resistance	IK10 Rated	