 
 


CAMERA CONNECTIONS

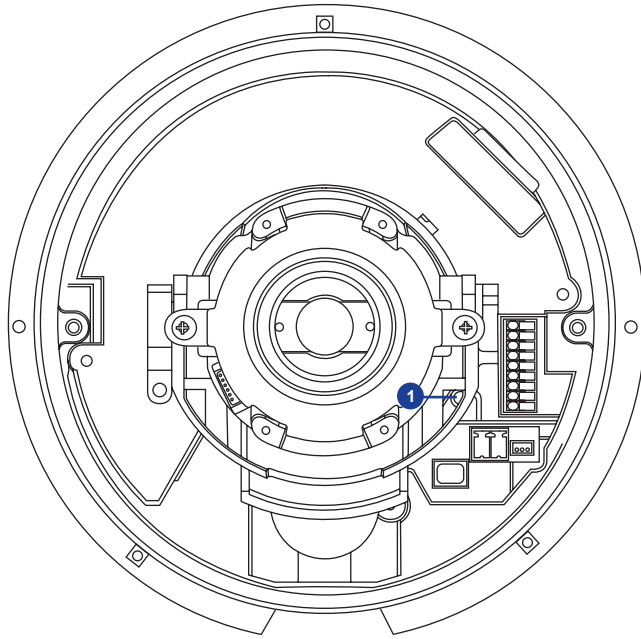

1	Reset Button	<p>To restore the camera to factory defaults:</p> <ol style="list-style-type: none"> 1. Disconnect power for 30 seconds. 2. Reconnect power and wait 30 seconds. 3. Press the reset button with a proper tool for 20 seconds.
---	--------------	--

DONGLE CONNECTIONS

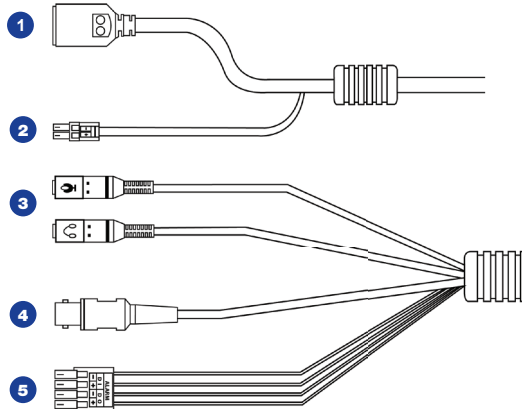

1	RJ-45	For network and PoE connections		
2	Power (12VDC / 24VAC)	1	12VDC / 24VAC 1	Power connection
		2	GND / 24VAC 2	
3	Audio I/O	Pink	Line Out	Two-way audio transmission
		Green	Line In	
4	BNC	For analog video input		
5	Alarm I/O (4-Pin Terminal Block)	1	Alarm In -	
		2	Alarm In +	
		3	Alarm Out -	
		4	Alarm Out +	

OpenEye

The Cloud Video Platform

Liberty Lake, WA, USA
509.232.5261

openeye.net

Copyright ©2020 OpenEye.
All Rights Reserved. Information contained in this document is subject to change without prior notice. OpenEye does its best to provide accurate information but cannot be held responsible for typos or mistakes.

OpenEye®

QUICK START GUIDE

OE-C7624-AWR REVB | 4MP IP Dome Camera

This quick start guide provides only basic information on the camera's settings and operation for initial installation. Please read the user manual for optimal camera configurations.

 
34828AH

openeye.net


CONTENTS




OE-C7624 Dome Camera



Security Torx Tool

 


Quick Start Guide

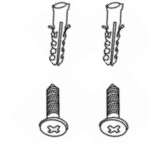 

Self-Tapping Screws & Plastic Anchors



 2-Pin Terminal Power Block



4-Pin Terminal Alarm Block

INSTALLATION

1. Apply template sticker to desired camera location
2. Drill anchor holes using included mounting template
3. Remove mounting template
4. Insert anchors
5. Mount camera
6. Adjust camera view
7. Secure Lid / dome

 


NOTE: If the camera will be exposed to inclement weather, OpenEye recommends sealing around the camera base, or connection to accessory and accessory connection to mounting surface with waterproof caulking.

ETHERNET CABLE CONNECTIONS

Connect a network cable to the camera using the RJ45 input and connect the other end of the cable to your network switch or recorder.

Check the status of the network connection by looking at the link indicator and activity indicator LEDs. If the LEDs are not lit check your network connection. The green link LED indicates a network connection and the orange activity LED flashes to indicate network activity.



POWER

This camera is compatible with 12vDC, 24vAC and Power over Ethernet (PoE). Connect power to the camera using the terminal connector blocks. If you are connecting 12vDC power, verify the polarity of the power connection.

CAUTION: Risk of explosion of battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

The product is intended to be supplied by a UL Listed Power supply suitable for use at (T_{ma} = 55 degree C) whose output meets SELV/ES1 and LPS/PS2, and is rated (1) 12Vdc, 1.2A min., (2) 24Vac, 50/60Hz or 50-60Hz, 0.55A min., (3) 48Vdc, 0.255A min.

DEFAULT USERNAME AND PASSWORD



NOTE: OpenEye IP cameras ship without a default password.

The admin user password can be set using the following methods:

1. OpenEye recorders running Apex 2.1 or newer will automatically set a new unique password if:
 - Connected to an M-Series recorder with a built in PoE switch.

- Connected to a network switch through the camera network port and selected then added in setup, if a new password has not already been set.

2. Connect to the camera directly through a Web Browser and follow the onscreen prompts.
3. Use the Network Camera Manager (NCM) Utility.

Username: **admin**



NOTE: The NCM software manual can be found at <https://www.openeye.net/ncm-manual>

ASSIGNING AN IP ADDRESS

OpenEye IP cameras are set to DHCP by default. If a DHCP server is not detected after 4 minutes, the camera will default to IP address 192.168.51.2. If you are not using a DHCP server, NCM will allow you to batch configure a static IP address.

The IP address for the camera network on your Apex recorder is 192.168.51.1.



NOTE: To change this IP address please refer to your Apex recorder manual.

Selecting multiple cameras and entering IP address 192.168.51.2 will set an IP address on all selected cameras, starting at 192.168.51.2 and increase per camera.

1. Open Network Camera Manager
2. Select applicable camera(s)
3. Input starting IP address, Subnet Mask, Gateway, DNS



NOTE: NCM requires entry in all fields.

4. Apply changes
5. Wait 60 seconds before refreshing NCM

CONNECTING TO THE IP CAMERA

To access the camera setup menu, you need to open Network Camera Manager (NCM) utility. NCM is pre-installed on all OpenEye Recorders, and is also available for download on the OpenEye website for installation on your personal computer or laptop.

1. Open **Network Camera Manager**.
2. Locate your camera on the **Network Camera Manager** list.
3. To open the web browser, select the camera and click **Load**.

PRODUCT FEATURES

Camera	
Maximum Resolution	4MP
Frame Rate at Maximum Resolution	30 FPS @ 4MP - H.264 / H.265
Total Streams	Up to 3 simultaneous streams
ONVIF	ONVIF Profile S / G / T Compliant
Day/Night	True Day / Night
Wide Dynamic Range	True WDR

Environmental and Power

Power Consumption	13.68W Max
Input Voltage	12vDC / 24vAC / PoE
PoE Class	0
IP Rating	IP66
Operating Temperature	-40 ~ 131 °F (-40 ~ 55 °C)